ACMER



Unboxing Guide

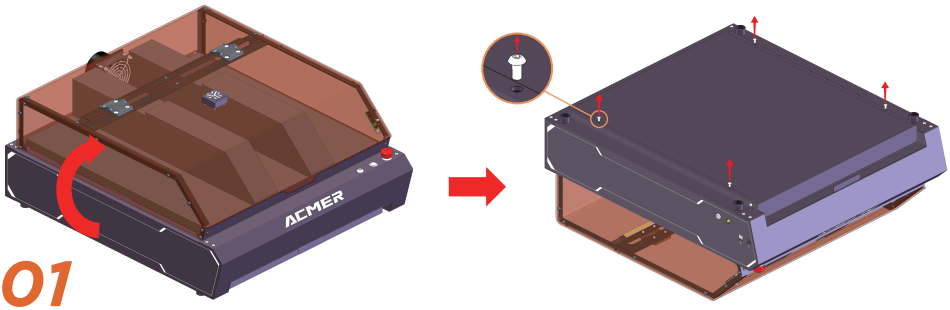

01

Turn the machine over 180° and remove the four screws on the bottom of the machine.

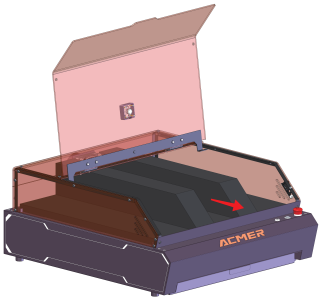

02

Take out the smoke pipe and the top fixing foam.

03

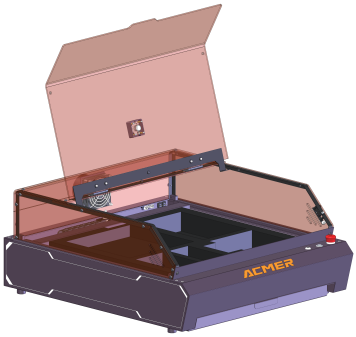

Remove the remaining accessories and the bottom foam.

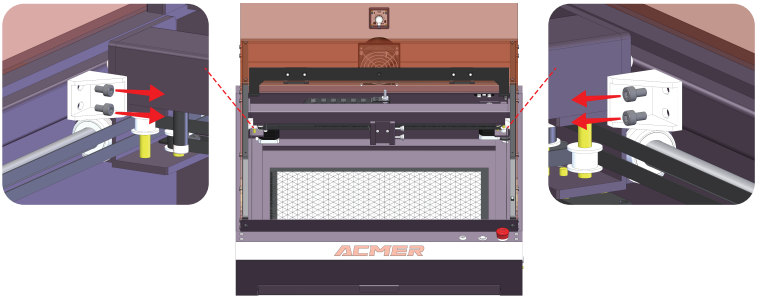

04

Disassemble the plastic blocks used to secure the Y-axis on both sides.

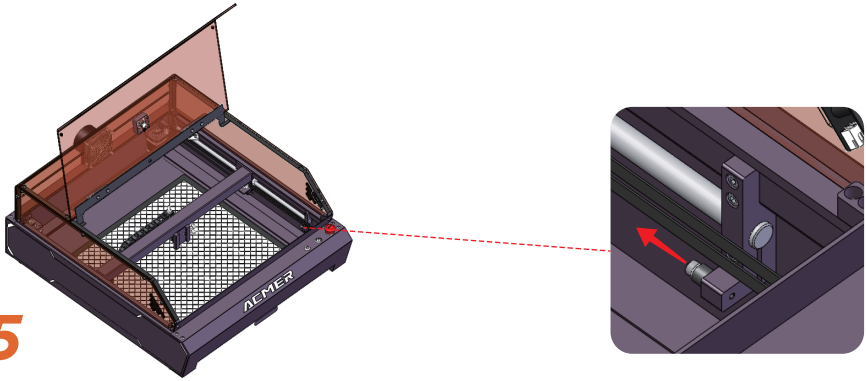

05

For customers using the 24W and 2W IR laser modules, please use a screwdriver to disassemble the screw and pillar shown in the diagram. For those using the 48W and 2 IN 1 laser modules, disassembly is not required.